

TA-F170/F240

SERVICE MANUAL

AEP Model
E Model
Germany Model
 TA-F170
UK Model
 TA-F170/F240



Photo: TA-F170

SPECIFICATIONS

Amplifier

Continuous RMS power output (both channels driven simultaneously)

Models for Scandinavian countries, Spain and Portugal

		TA-F170
DIN 1 kHz	6 ohms	50 W + 50 W
	8 ohms	40 W + 40 W
20 Hz - 20 kHz	8 ohms	30 W + 30 W THD 0.05 %

Model Germany

		TA-F170
DIN 1 kHz	4 ohms	50 W + 50 W
	8 ohms	35 W + 35 W
20 Hz - 20 kHz	4 ohms	—
20 Hz - 20 kHz	8 ohms	30 W + 30 W THD 0.05 %

Model UK

		TA-F170	TA-F240
DIN 1 kHz	4 ohms	50 W + 50 W	80 W + 80 W
	8 ohms	40 W + 40 W	70 W + 70 W
20 Hz - 20 kHz	8 ohms	30 W + 30 W THD 0.05 %	60 W + 60 W 0.05 %

AEP, E Model

		TA-F170
DIN 1 kHz	4 ohms	50 W + 50 W
	8 ohms	40 W + 40 W
20 Hz - 20 kHz	4 ohms	—
20 Hz - 20 kHz	8 ohms	30 W + 30 W THD 0.05 %

Tone controls

	Response	Turnover frequency
BASS	± 6 dB	500 Hz
TREBLE	± 6 dB	3 kHz

Input

Input jack		Jack type	Sensi- tivity	Impe- dance	S/N (weighting network, input level)
PHONO	MM	Phono	2.0 mV	50 kilohms	76 dB (A, 5 mV)
	MC		170 μ V	100 ohms	75 dB (A, 0.5 mV)
TUNER, CD, AUX, TAPE/DAT		Phono	150 mV	50 kilohms	96 dB (150 mV)

— Continued on next page —



INTEGRATED STEREO AMPLIFIER
SONY®

TA-F170/F240

Output

Output jack	Jack type	Voltage/impedance
REC OUT	Phono	Voltage 150 mV Impedance 1 kohms
SPEAKERS	—	Model for Scandinavian countries, Spain and Portugal Accepts speakers of 6 – 16 ohms. Models for other countries Accepts speakers of 4 – 16 ohms
HEAD-PHONES	Stereo phone	Accepts low and high impedance headphones.

Loudness (Attenuation 30 dB)

+ 6 dB (100 Hz)/ + 3 dB (10 kHz)

Subsonic filter 6 dB/octave, attenuation below 15Hz

Intermodulation (IM) distortion (60 Hz: 7 kHz=4: 1)

Less than 0.05% at rated output

Frequency response **PHONE:** RIAA equalization curve ± 0.5 dB

TUNER, CD, AUX, TAPE1/DAT:

7 Hz – 100 kHz ± 3 dB

Residual noise Less than 190 μ V (network A)

Damping factor 40 (8 ohms, 1 kHz)

Power requirements AEP, Germany models:

220 – 230 V AC, 50 Hz


UK model: 240 V AC, 50 Hz

E model: 120 V,

220 V or 240 V AC adjustable, 50/60 Hz

MODEL IDENTIFICATION

— Specification Labels —

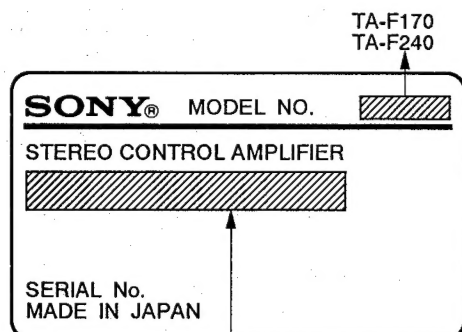

AEP, Germany model: AC: 220 – 230 V~50/60Hz 90 W

TA-F170 UK model: AC: 240 V ~50/60 Hz 250 W

TA-F240 UK model: AC: 240 V ~50/60 Hz 380 W

E model: AC: 120/220/240 V ~50/60 Hz 90 W

Power consumption

Models for	F170	F240
UK	250 W	380 W
Germany	95 W	—
AEP, E	90 W	—

Dimensions Approx. 430 × 135 × 312 mm (w/h/d)
(17 × 5³/₈ × 12³/₈ inches)

Weight TA-F170: Approx. 7.6 kg (16 lb 12 oz)
TA-F240: Approx. 8 kg (17 lb 10 oz)

* For all the countries except U.K. and Canada, the above values are measured at 230 V AC.

Design and specifications subject to change without notice.

Note

This appliance conforms with EEC directive 87/308/EEC regarding interference suppression.

TABLE OF CONTENTS

Section	Title	Page
Specifications	1
Model Identification	2
Precautions	3
1. GENERAL	4
Connections	4
Parts Identification	4
2. DISASSEMBLY	5
2-1. Disassembly Of Front Panel	5
3. ELECTRICAL ADJUSTMENTS	5
4. DIAGRAMS	6
4-1. Block Diagram	6
4-2. Printed Wiring Boards	8
4-3. Schematic Diagram	11
5. EXPLODED VIEWS	14
6. ELECTRICAL PARTS LIST	16


SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

Precautions

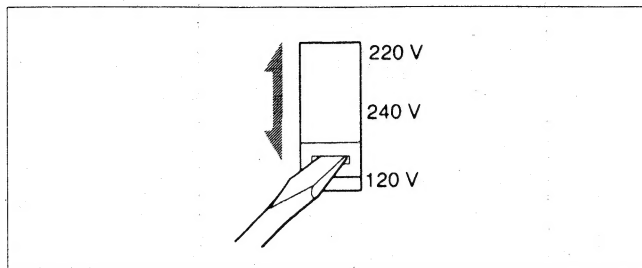

On safety

- Before operating the unit, check that the operating voltage of your unit is identical with the voltage of your local power supply.

Where purchased	Operating voltage
Canada	120 V AC
United Kingdom	240 V AC
Continental European countries	220 - 230 V AC
Other countries	120 V, 220 V or 240 V AC adjustable The voltage selector is located on the rear panel. If the selector must be reset, disconnect the AC power cord and set the selector to the proper voltage of your local power supply.

- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- Do not block the ventilation holes on top of the unit. The ventilation holes must be unobstructed for proper operation of the unit and to prolong the life of its components.
- AC power cord must be changed only at the qualified service shop.

On cleaning the cabinet

Clean the cabinet, panels and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

On repacking

Do not throw away the carton and the packing material. This makes an ideal container when transporting the unit. When shipping the unit, repack it as it was packed at the factory.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

Parts Identification/Identification des parties Identificação de partes/Identificacao dos comandos

Refer to the pages indicated in ● for details.
Pour les détails, se reporter aux pages indiquées dans les cercles noirs.
Para los detalles, reléase a las páginas indicadas en ●.
Consulte as páginas indicadas nas ● para mais pormenores.

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

●

Connections


Notes on Connection

- Connect the AC power cord last. Make sure power is off.
- Cord plugs and jacks are color coded. Red plugs and jacks are for right channel (R) and white ones for left channel (L).
- Fully insert cable connectors into jacks. Loose connections may cause hum or noise.

Remarques sur les connexions


- Le cordon d'alimentation doit être branché en dernier lieu, après s'être assuré que l'appareil est bien hors tension.
- Les fiches des cordons et les prises sont codées par couleur. Les fiches et prises rouges sont destinées au canal droit (R) et les blanches, au canal gauche (L).
- Insérer les connecteurs des câbles à fond dans les prises. En effet, une connexion relâchée peut provoquer un ronflement ou du bruit.

Connexions

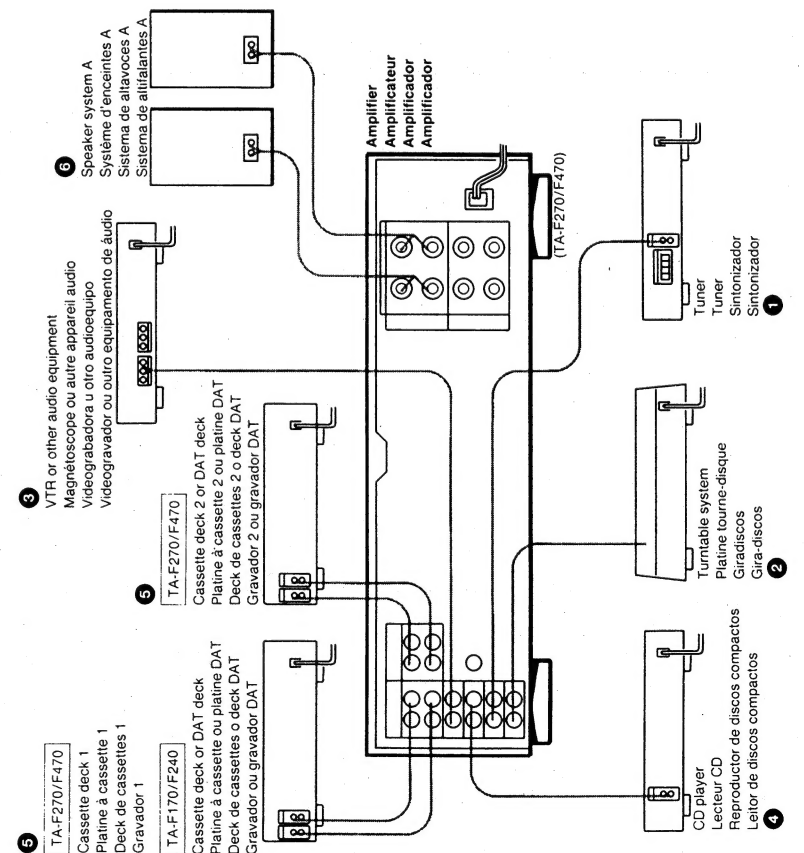

SECTION 1 GENERAL

This section is extracted from TA-F170/
F240/F270/F470 instruction manual.

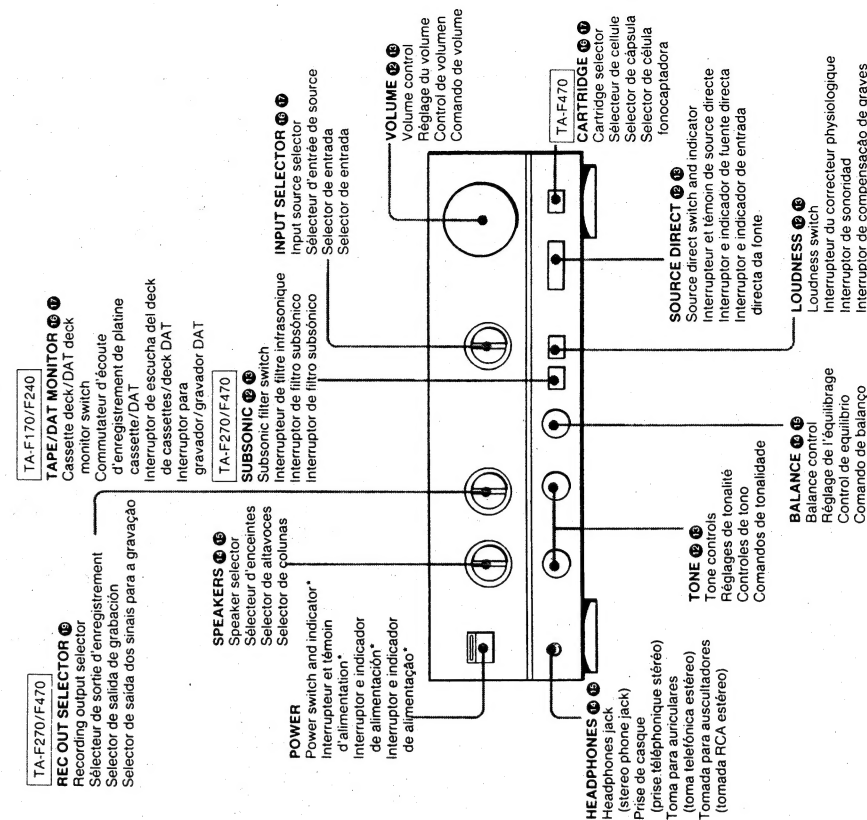


SECTION 2

DISASSEMBLY

2-1. DISASSEMBLY OF FRONT PANEL

Note: Follow the disassembly procedure in the numerical order given.

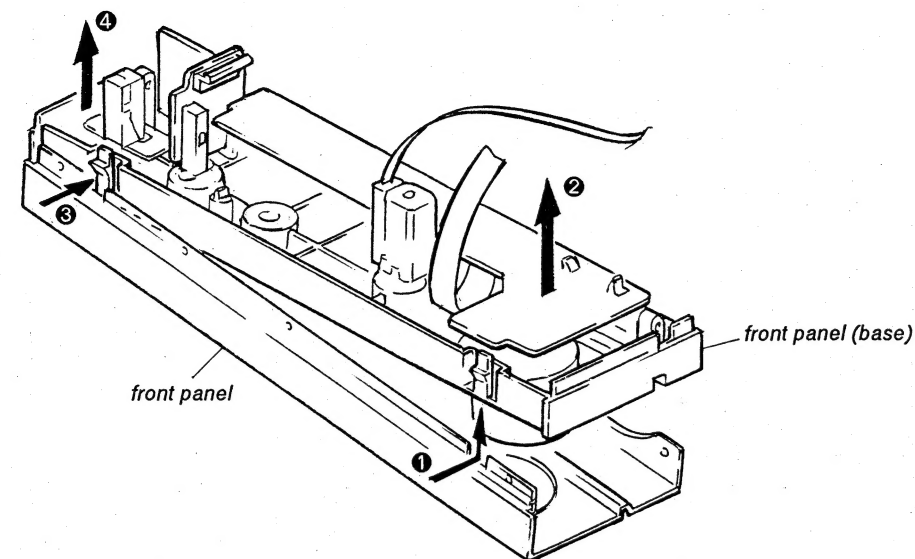

SECTION 3

ELECTRICAL ADJUSTMENT

NOTE:



- Adjustment should be performed 10 minutes after the POWER switch is on (POWER ON).

Bias Current Adjustment

Setting:
VOLUME control: minimum

Adjustment Location:

[AMP BOARD] — Component Side —

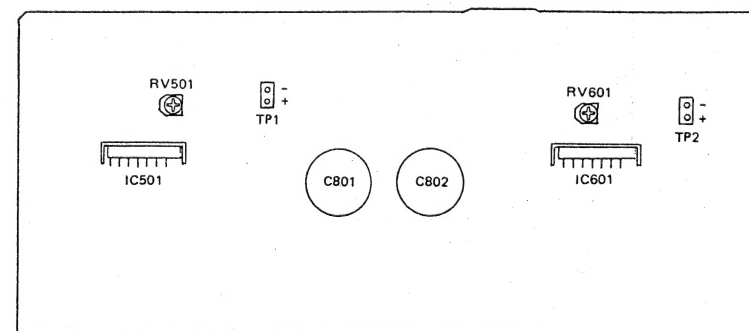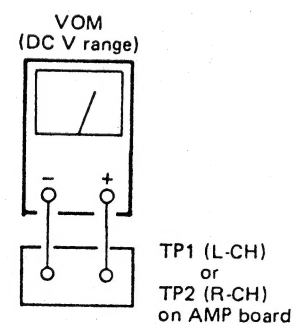


Procedure:

Adjust RV501 (L-CH) and RV601 (R-CH) so as to obtain 4 mV (TA-F120) or 2 mV (TA-F220) at TP1 (L-CH) and TP2 (R-CH) respectively.

4-1. BLOCK DIAGRAM

SECTION 4


DIAGRAM

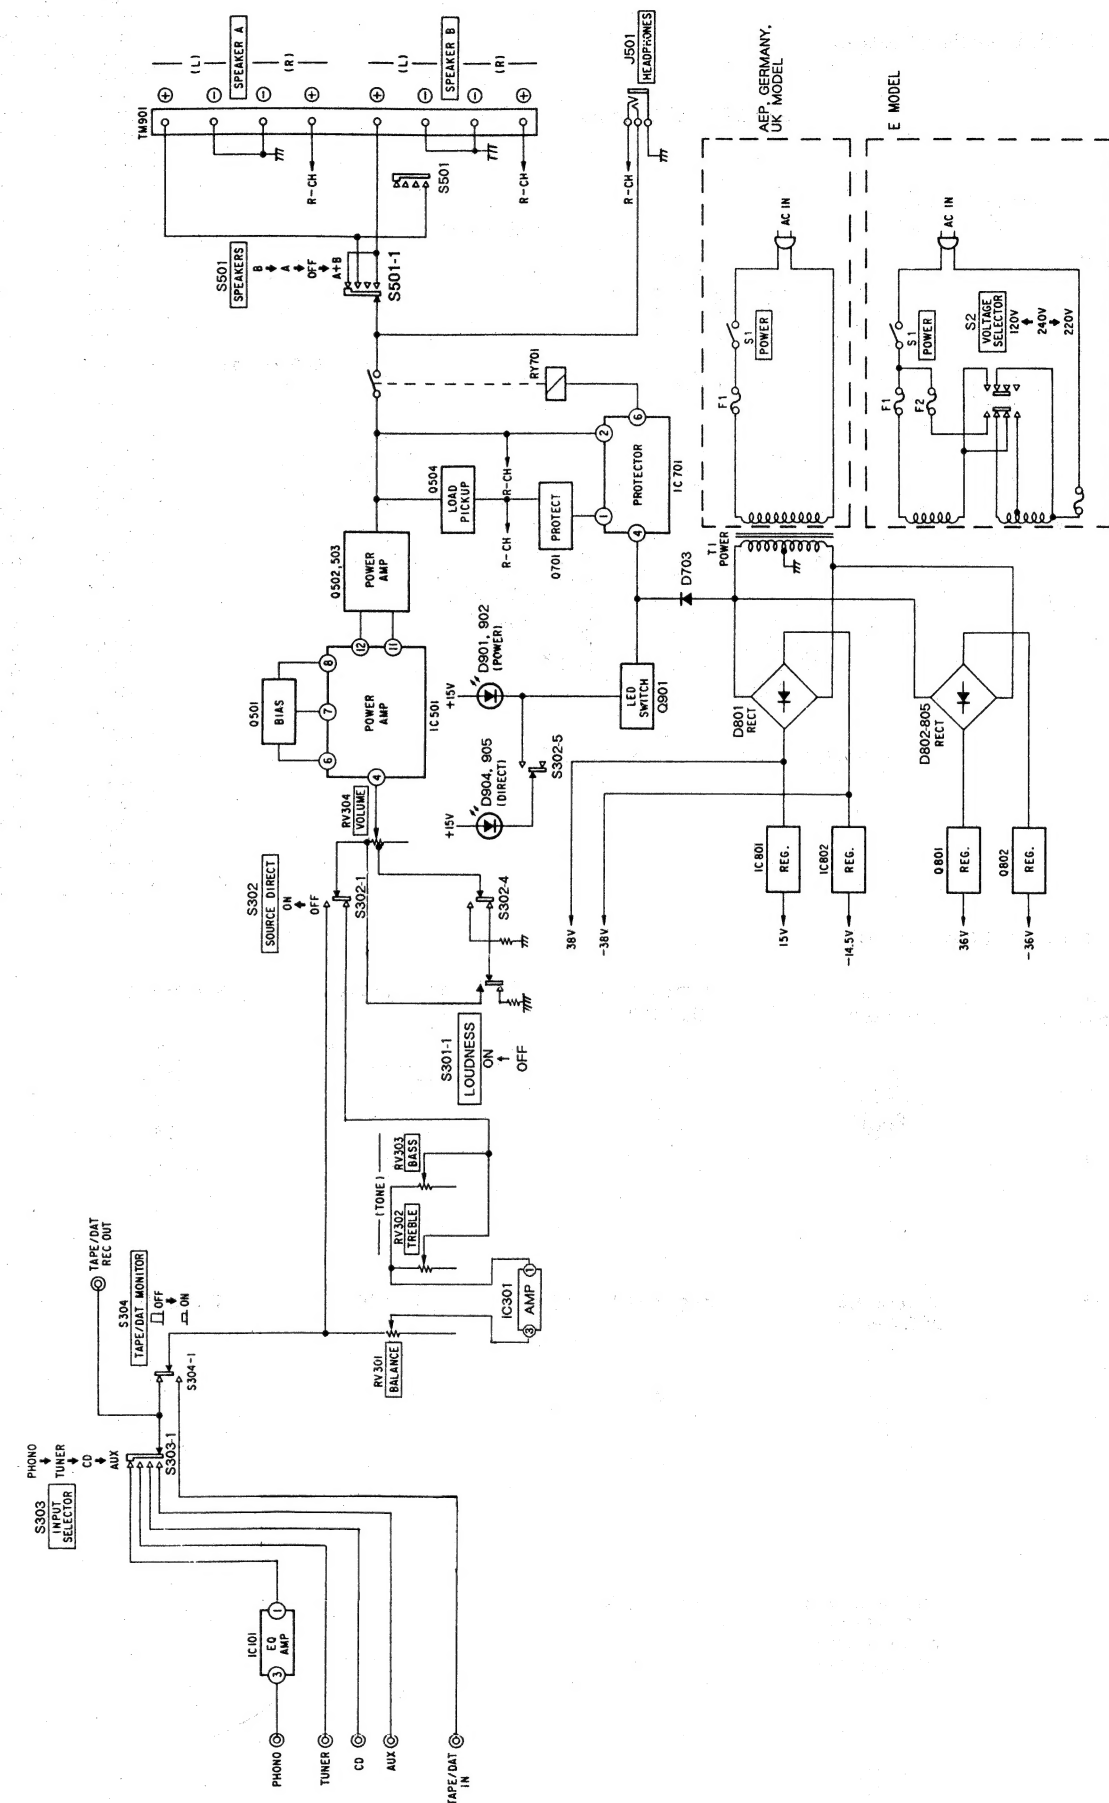


M5218AL
μ PC1237HA





μ PC1298V
μ PC1342V




2SB1370-EF
2SD2012



RBV-602-01

**SEL2510C-C**



TA7815S

DTA124ES
2SC2603-EF


2SC1841-PAFAEA




1SS120

**SEL2810A-C**

TA7915S



2SA1490-OPY
2SA1491-OY
2SC3854-OY
2SC3855-OY



2SD1312-K



10E2



Ref. No.	Location
D501	B-15
D502	B-15
D601	B-11
D602	B-11
D701	D-14
D702	E-14
D703	E-12
D801	E-10
D802	E-13
D803	E-13
D804	F-13
D805	F-13
D901	H-15
D902	H-15
D904	K-8
D905	K-8
IC101	F-4
IC301	J-14
IC501	C-15
IC601	D-9
IC701	D-14
IC801	D-7
IC802	D-8
Q501	A-13
Q502	A-14
Q503	A-12
Q504	B-15
Q601	A-9
Q602	A-10
Q603	A-8
Q604	B-11
Q701	D-14
Q801	E-15
Q802	F-15
Q901	E-15

1 2 3 4 5 6 7 8 9

A

B

C

D

E

F

G

H

I

J

K

TAPE / DAT IN AUX CD TUNER PHONO

REC OUT (L) (R) CNJ102-3 (L) (R) CNJ102-2 (L) (R) CNJ102-1 (L) (R) CNJ101-3 (L) (R) CNJ101-2 (L) (R) CNJ101-1

GERMANY MODEL

CHASSIS

AEP, UK MODEL

IC 01

IC 02

IC 03

IC 04

IC 05

IC 06

IC 07

IC 08

IC 09

IC 10

IC 11

IC 12

IC 13

IC 14

IC 15

IC 16

IC 17

IC 18

IC 19

IC 20

IC 21

IC 22

IC 23

IC 24

IC 25

IC 26

IC 27

IC 28

IC 29

IC 30

IC 31

IC 32

IC 33

IC 34

IC 35

IC 36

IC 37

IC 38

IC 39

IC 40

IC 41

IC 42

IC 43

IC 44

IC 45

IC 46

IC 47

IC 48

IC 49

IC 50

IC 51

IC 52

IC 53

IC 54

IC 55

IC 56

IC 57

IC 58

IC 59

IC 60

IC 61

IC 62

IC 63

IC 64

IC 65

IC 66

IC 67

IC 68

IC 69

IC 70

IC 71

IC 72

IC 73

IC 74

IC 75

IC 76

IC 77

IC 78

IC 79

IC 80

IC 81

IC 82

IC 83

IC 84

IC 85

IC 86

IC 87

IC 88

IC 89

IC 90

IC 91

IC 92

IC 93

IC 94

IC 95

IC 96

IC 97

IC 98

IC 99

IC 100

IC 101

IC 102

IC 103

IC 104

IC 105

IC 106

IC 107

IC 108

IC 109

IC 110

IC 111

IC 112

IC 113

IC 114

IC 115

IC 116

IC 117

IC 118

IC 119

IC 120

IC 121

IC 122

IC 123

IC 124

IC 125

IC 126

IC 127

IC 128

IC 129

IC 130

IC 131

IC 132

IC 133

IC 134

IC 135

IC 136

IC 137

IC 138

IC 139

IC 140

IC 141

IC 142

IC 143

IC 144

IC 145

IC 146

IC 147

IC 148

IC 149

IC 150

IC 151

IC 152

IC 153

IC 154

IC 155

IC 156

IC 157

IC 158

IC 159

IC 160

IC 161

IC 162

IC 163

IC 164

IC 165

IC 166

IC 167

IC 168

IC 169

IC 170

IC 171

IC 172

IC 173

IC 174

IC 175

IC 176

IC 177

IC 178

IC 179

IC 180

IC 181

IC 182

IC 183

IC 184

IC 185

IC 186

IC 187

IC 188

IC 189

IC 190

IC 191

IC 192

IC 193

IC 194

IC 195

IC 196

IC 197

IC 198

IC 199

IC 200

IC 201

IC 202

IC 203

IC 204

IC 205

IC 206

IC 207

IC 208

IC 209

IC 210

IC 211

IC 212

IC 213

IC 214

IC 215

IC 216

IC 217

IC 218

IC 219

IC 220

IC 221

IC 222

IC 223

IC 224

IC 225

IC 226

IC 227

IC 228

IC 229

IC 230

IC 231

IC 232

IC 233

IC 234

IC 235

IC 236

IC 237

IC 238

IC 239

IC 240

IC 241

IC 242

IC 243

IC 244

IC 245

IC 246

IC 247

IC 248

IC 249

IC 250

IC 251

IC 252

IC 253

IC 254

IC 255

IC 256

IC 257

IC 258

IC 259

IC 260

IC 261

IC 262

IC 263

IC 264

IC 265

IC 266

IC 267

IC 268

IC 269

IC 270

IC 271

IC 272

IC 273

IC 274

IC 275

IC 276

IC 277

IC 278

IC 279

IC 280

IC 281

IC 282

IC 283

IC 284

IC 285

IC 286

IC 287

IC 288

IC 289

IC 290

IC 291

IC 292

IC 293

IC 294

IC 295

IC 296

IC 297

IC 298

IC 299

IC 300

IC 301

IC 302

IC 303

IC 304

IC 305

IC 306

IC 307

IC 308

IC 309

IC 310

IC 311

IC 312

IC 313

IC 314

IC 315

IC 316

IC 317

IC 318

IC 319

IC 320

IC 321

IC 322

IC 323

IC 324

IC 325

IC 326

IC 327

IC 328

IC 329

IC 330

IC 331

IC 332

IC 333

IC 334

IC 335

IC 336

IC 337

IC 338

IC 339

IC 340

IC 341

IC 342

IC 343

IC 344

IC 345

IC 346

IC 347

IC 348

IC 349

IC 350

IC 351

IC 352

IC 353

IC 354

IC 355


IC 356


IC 357

IC 358

IC 359


4-3. SCHEMATIC DIAGRAM

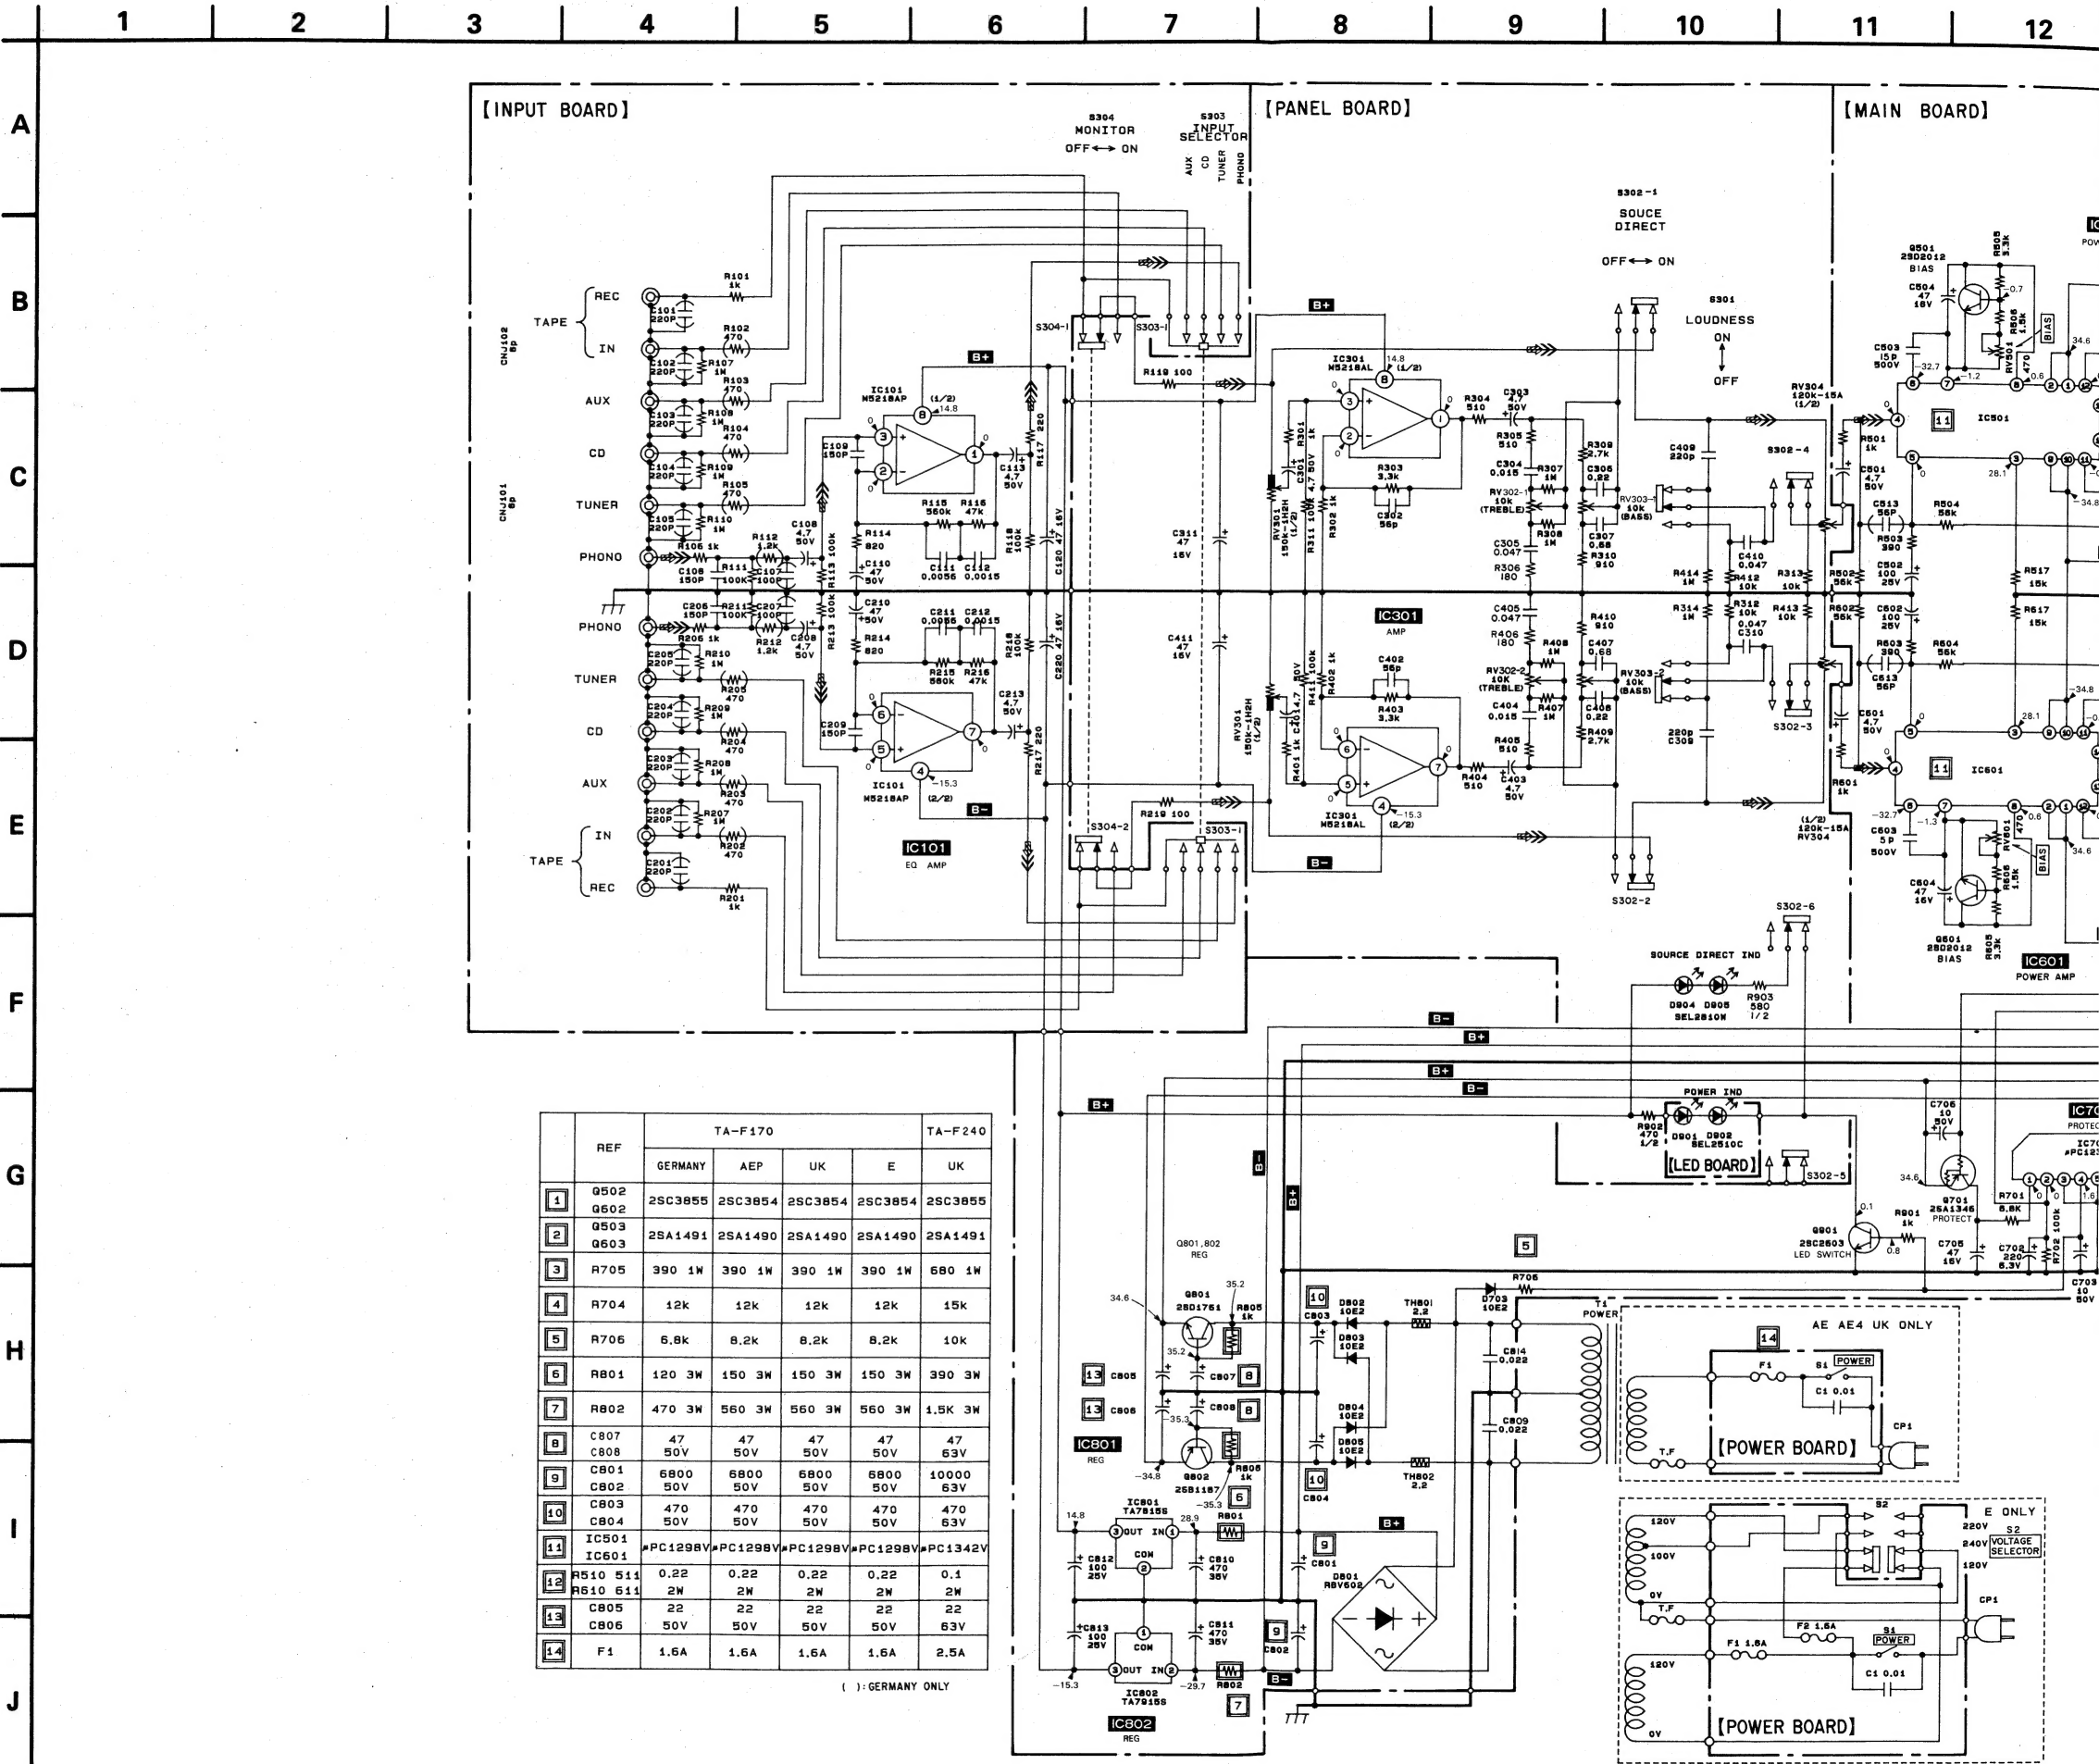

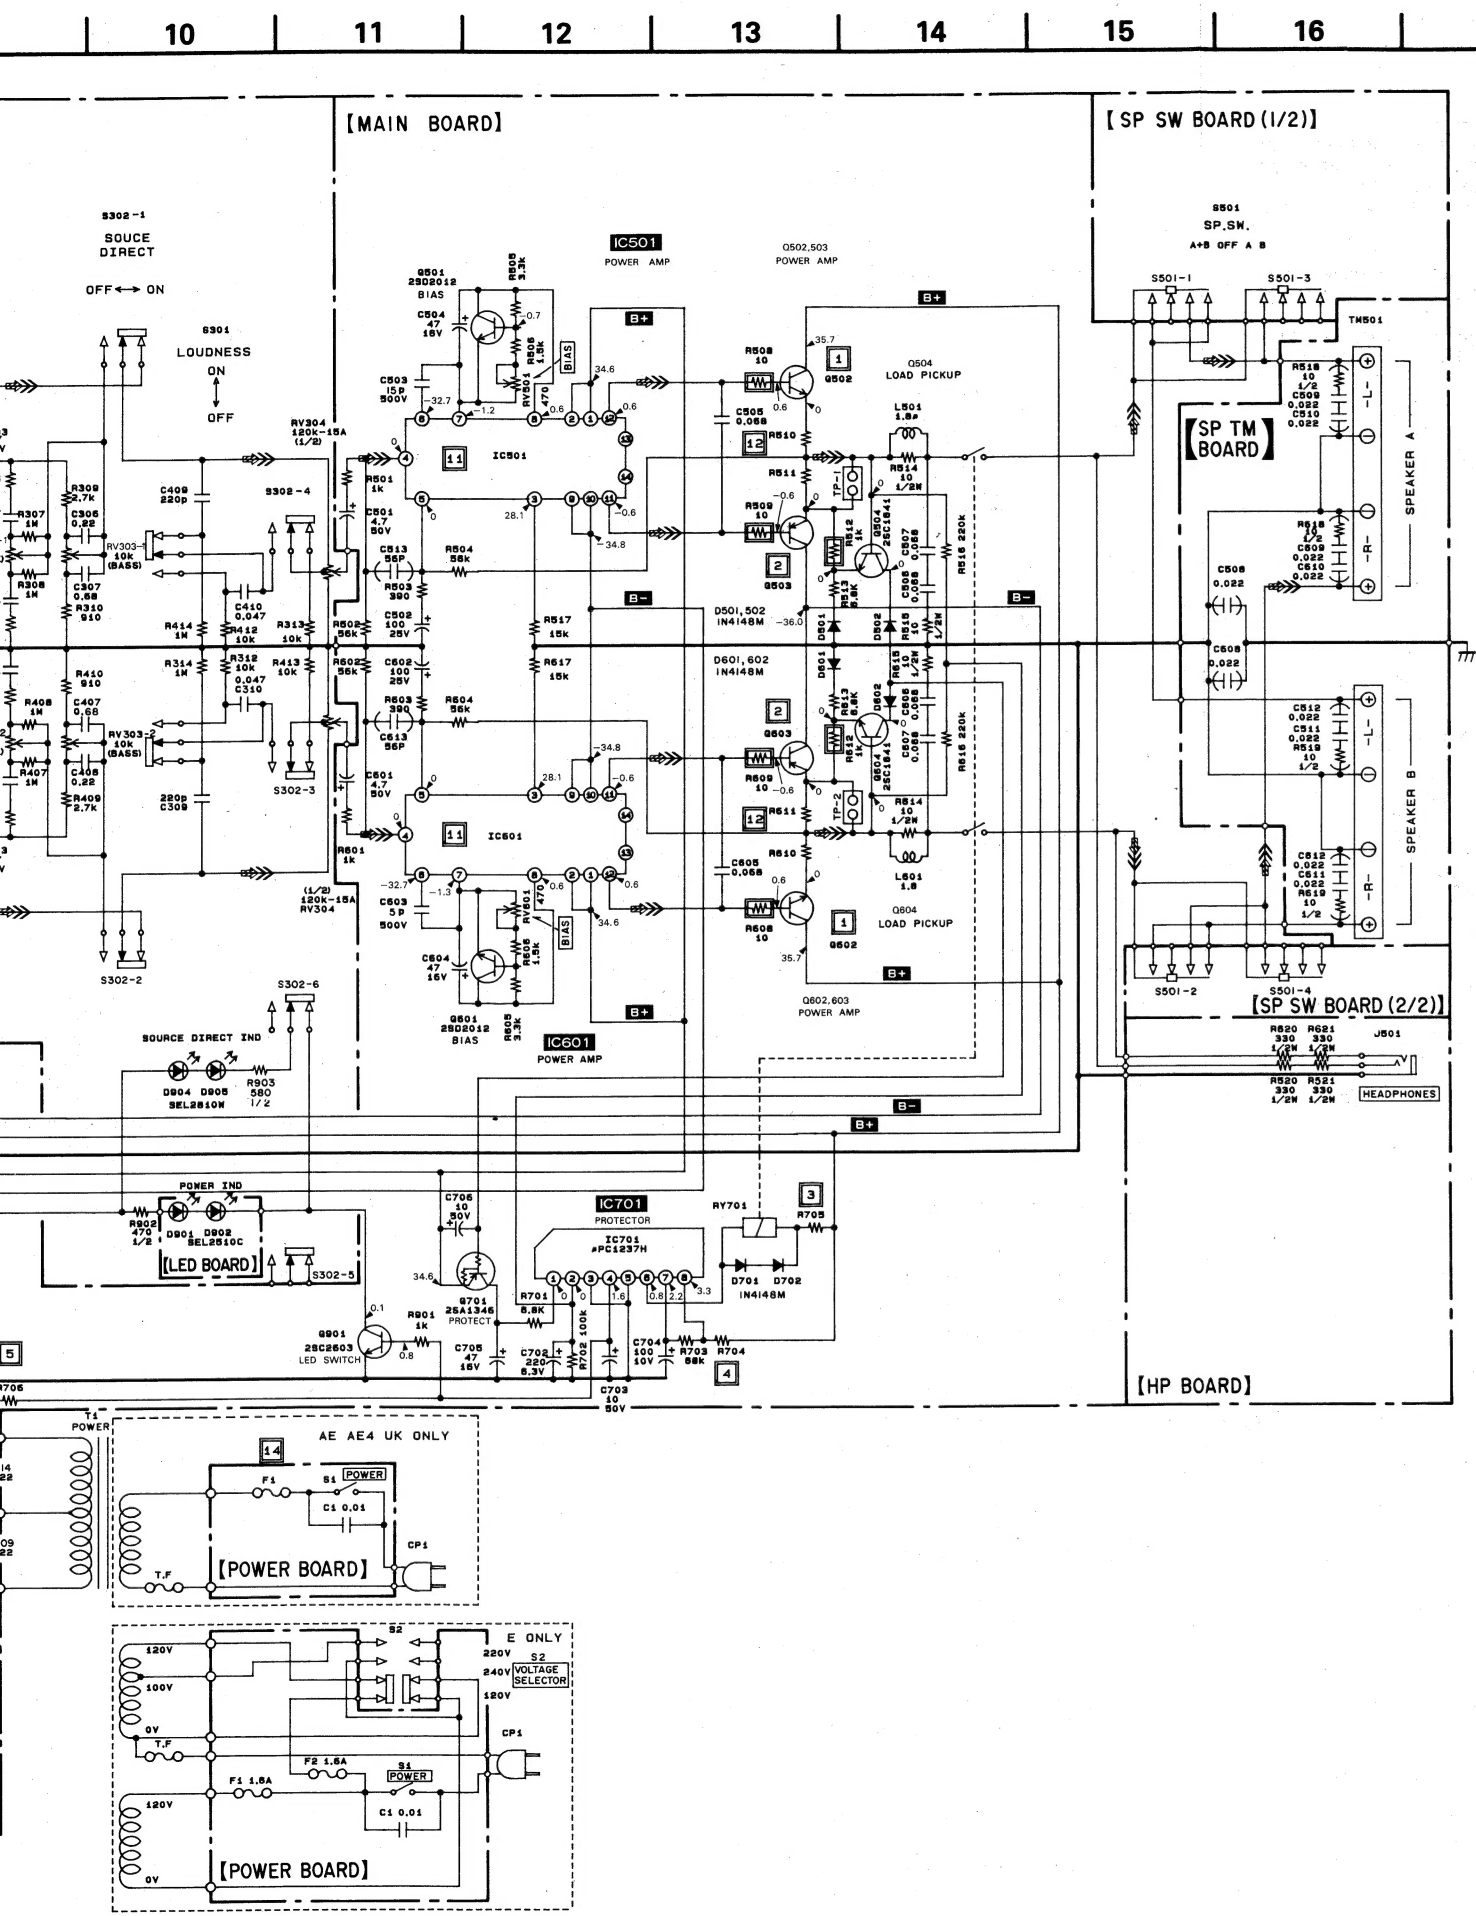


• IC Block Diagrams

IC501, 601 μ PC1298V

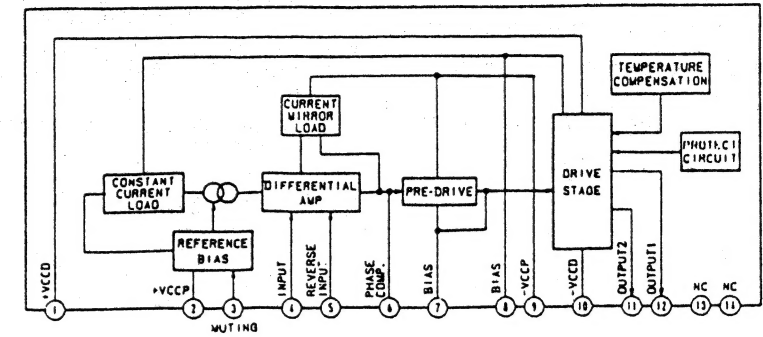

IC701 μ PC1237HA

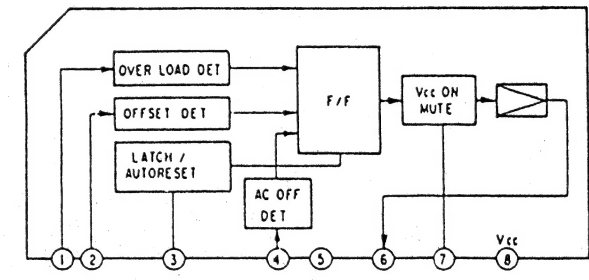

Note:

- All capacitors are in μ F unless otherwise noted. pF: μ F 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
- \square : nonflammable resistor.

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- B+**: B+ Line.
- B-**: B- Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages are taken with a VOM (10 M Ω /V). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- \Rightarrow : PHONO

SECTION 5

EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) ... (RED)

Parts Color Cabinet's Color


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list is given in the last of this parts list.


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

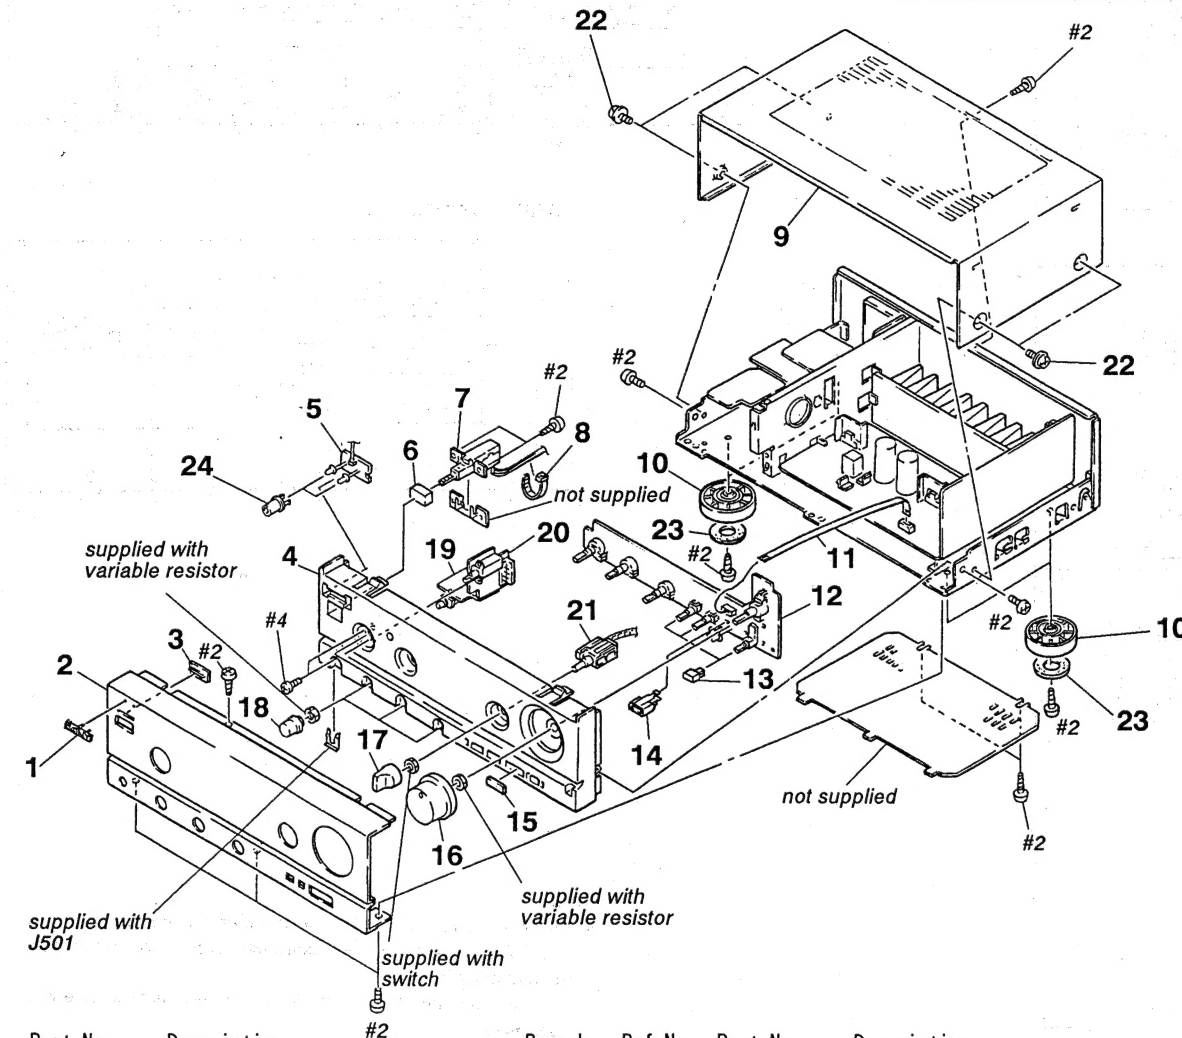

Ref. No.	Part No.	Description	Remark
1	4-908-848-01	EMBLEM, SONY	
2	4-945-182-01	PANEL, FRONT (F170)	
2	4-945-182-11	PANEL, FRONT (F240)	
3	4-945-175-01	INDICATOR (PSW)	
4	* 4-945-181-01	PANEL (BASE), FRONT	
5	* 1-639-817-11	LED BOARD	
6	4-929-289-01	BUTTON	
7	1-553-318-41	SWITCH, PUSH (AC POWER) (1 KEY)	
8	3-655-653-21	BAND (TAITON), BINDING (F170:AEP, UK, GERMANY/F240)	
9	4-929-294-11	CASE	
10	X-3304-938-2	FOOT ASSY	
11	1-590-036-11	WIRE, FLAT TYPE (13 CORE)	

Ref. No.	Part No.	Description	Remark
12	* A-4345-123-A	PANEL BOARD, COMPLETE (F240)	
12	* A-4345-133-A	PANEL BOARD, COMPLETE (F170)	
13	4-945-176-01	BUTTON (18X11)	
14	4-945-177-01	HOUSE, LIGHTING	
15	4-945-622-01	PLATE (S/D), INDICATION	
16	X-4941-616-1	KNOB (R53) ASSY	
17	4-945-173-01	KNOB (R21)	
18	4-945-174-01	KNOB (F25)	
19	* 1-639-812-11	H.P. BOARD	
20	* 1-639-811-11	SP SW BOARD	
21	1-572-803-11	SWITCH, ROTARY SLIDE (INPUT SELECTOR)	
22	3-704-366-01	SCREW (CASE) (M3X8)	
23	4-923-836-11	CUSHION	
24	* 3-362-478-21	HOLDER (T), LED	

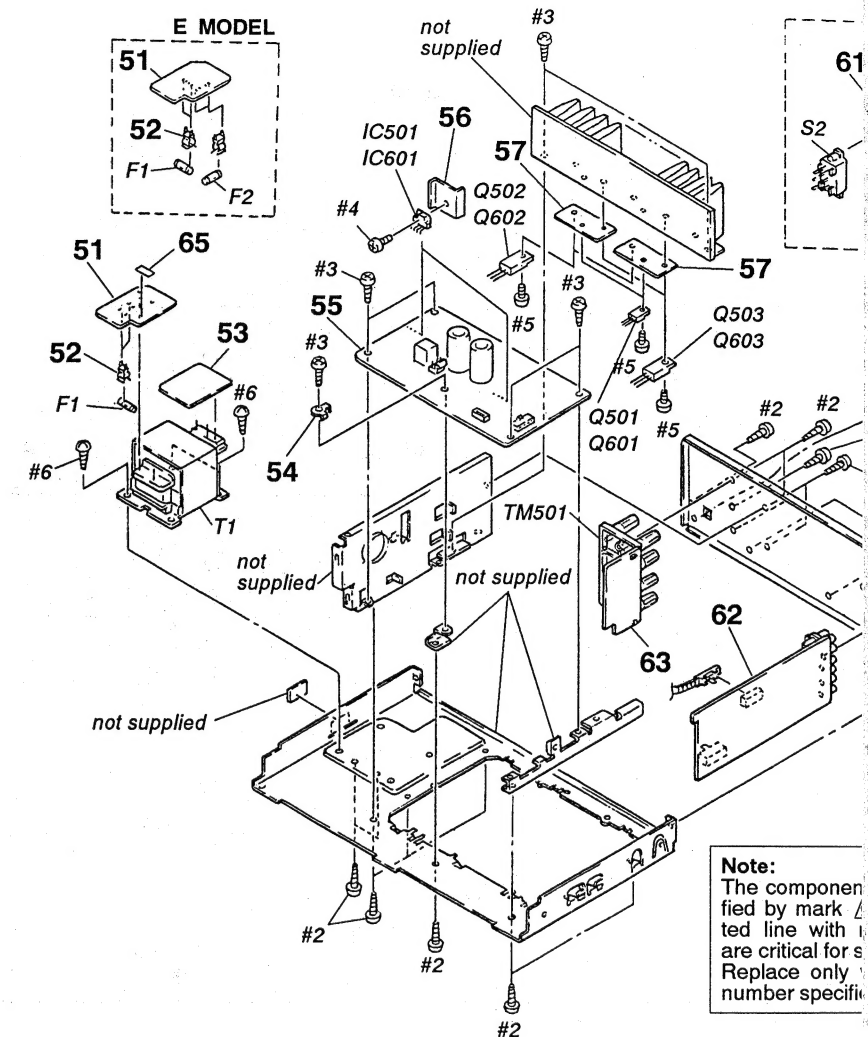

Ref. No.	Part No.	Description	Remark
51	* 1-639-816-11	POWER BOARD	
52	* 1-533-225-11	HOLDER, FUSE	
53	* 1-639-818-11	TRANSFORMER BOARD	
54	* 4-942-204-01	PLATE, GROUND	
55	* A-4345-128-A	MAIN BOARD, COMPLETE (F240)	
55	* A-4345-138-A	MAIN BOARD, COMPLETE (F170:AEP, UK)	
55	* A-4345-143-A	MAIN BOARD, COMPLETE (F170:GERMANY)	
55	* A-4345-154-A	MAIN BOARD, COMPLETE (F170:E)	
56	* 4-931-998-11	HEAT SINK (S) (F170)	
56	* 4-931-998-21	HEAT SINK (S) (F240)	
57	4-945-480-01	SHEET, INSULATING	
58	* 3-703-571-11	BUSHING (S) (4516), CORD (F170:E)	
58	* 3-703-244-00	BUSHING (2104), CORD	
59	* 2-379-614-01	HOOK	
60	3-706-165-00	SCREW	
61	* 4-941-986-41	PANEL, BACK (F170:E)	
61	* 4-941-986-51	PANEL, BACK (F240)	

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
61	* 4-944-986-41	PANEL, BACK (F170:E)	
61	* 4-944-986-51	PANEL, BACK (F240)	
62	* 1-639-814-01	PANEL, BACK (F170:E)	
63	* 1-639-813-01	PANEL, BACK (F170:E)	
64	* 1-569-007-01	PANEL, BACK (F170:E)	
65	3-701-947-01	PANEL, BACK (F170:E)	
CP1	* 1-575-651-01	PANEL, BACK (F170:E)	
CP1	* 1-575-652-01	PANEL, BACK (F170:E)	
CP1	* 1-575-653-01	PANEL, BACK (F170:E)	
F1	* 1-532-286-01	PANEL, BACK (F170:E)	
F1	* 1-532-259-01	PANEL, BACK (F170:E)	
F2	* 1-532-259-01	PANEL, BACK (F170:E)	
S2	* 1-570-307-01	PANEL, BACK (F170:E)	
T1	* 1-450-575-01	PANEL, BACK (F170:E)	
T1	* 1-450-576-01	PANEL, BACK (F170:E)	
T1	* 1-450-577-01	PANEL, BACK (F170:E)	
T1	* 1-450-578-01	PANEL, BACK (F170:E)	
T1	* 1-450-579-01	PANEL, BACK (F170:E)	

SECTION 6 ELECTRICAL PARTS LIST

MAIN SP SW H. P SP TM INPUT


NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS**
All resistors are in ohms.
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS**
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...
- CAPACITORS**
uF: μ F
- COILS**
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When including parts by reference number, please include the board name.

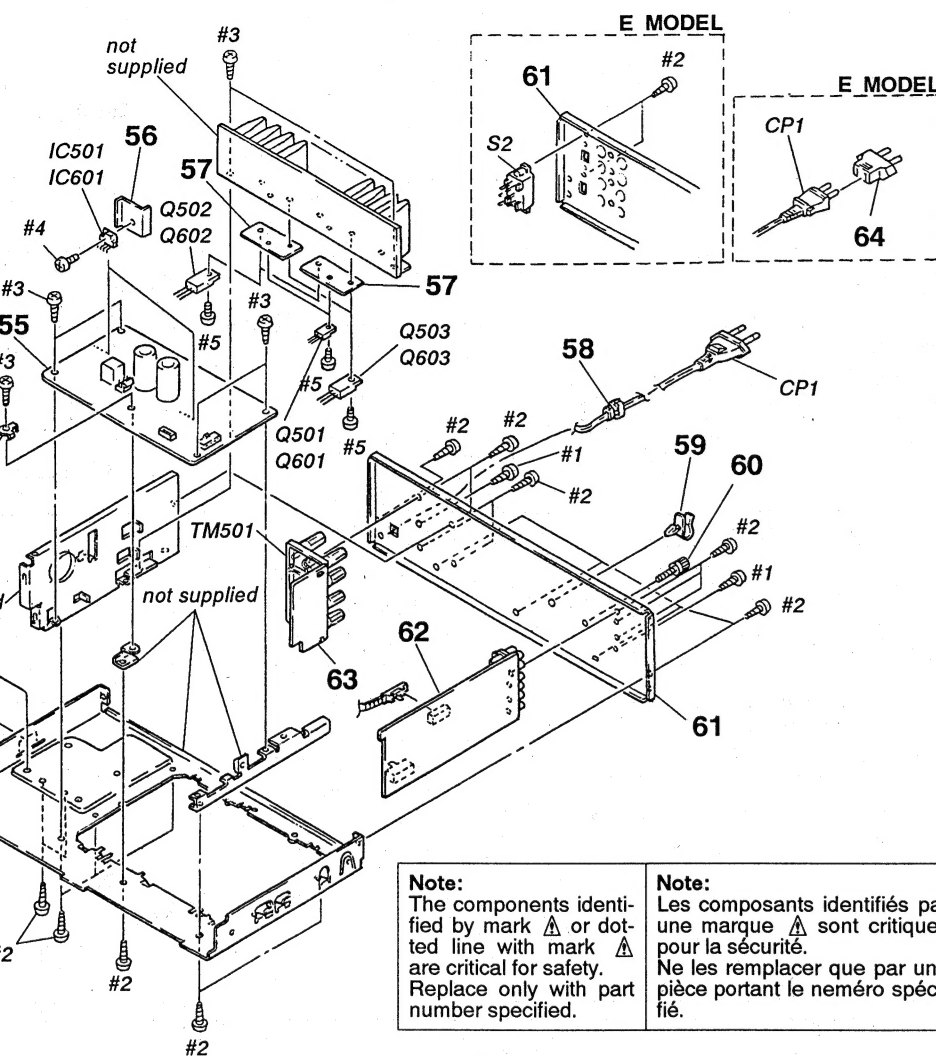

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		* A-4345-128-A MAIN BOARD, COMPLETE (F240)		C503	1-102-316-00	CERAMIC 15PF 5% 500V	
		* A-4345-138-A MAIN BOARD, COMPLETE (F170:AEP, UK)		C504	1-126-022-11	ELECT 47uF 20% 16V	
		* A-4345-143-A MAIN BOARD, COMPLETE (F170:GERMANY)		C505	1-136-163-00	FILM 0.068uF 5% 50V	
		* A-4345-154-A MAIN BOARD, COMPLETE (F170:E)		C506	1-136-163-00	FILM 0.068uF 5% 50V	
		*****		C507	1-136-163-00	FILM 0.068uF 5% 50V	
		* 1-639-811-11 SP SW BOARD		C508	1-136-157-00	FILM 0.022uF 5% 50V	
		*****				(F170:GERMANY)	
		* 1-639-812-11 H. P. BOARD		C509	1-136-157-00	FILM 0.022uF 5% 50V	
		*****				(F170:GERMANY)	
		* 1-639-813-11 SP TM BOARD		C510	1-136-157-00	FILM 0.022uF 5% 50V	
		*****				(F170:GERMANY)	
		* 1-639-814-11 INPUT BOARD		C511	1-136-157-00	FILM 0.022uF 5% 50V	
		*****				(F170:GERMANY)	
		* 4-931-998-11 HEAT SINK (S) (F170)		C512	1-136-157-00	FILM 0.022uF 5% 50V	
		* 4-931-998-21 HEAT SINK (S) (F240)				(F170:GERMANY)	
		* 4-942-204-01 PLATE, GROUND		C513	1-162-217-11	CERAMIC 56PF	
		7-682-548-04 SCREW +8VTT 3X8 (S)				(F170:GERMANY)	
		< CAPACITOR >		C601	1-126-163-11	ELECT 4.7uF 20% 50V	
C101	1-162-286-31	CERAMIC 220PF 10% 50V		C602	1-126-023-11	ELECT 100uF 20% 25V	
		(F170:GERMANY)		C603	1-102-316-00	CERAMIC 15PF 5% 500V	
C102	1-162-286-31	CERAMIC 220PF 10% 50V		C604	1-126-022-11	ELECT 47uF 20% 16V	
		(F170:GERMANY)		C605	1-136-163-00	FILM 0.068uF 5% 50V	
C103	1-162-286-31	CERAMIC 220PF 10% 50V		C606	1-136-163-00	FILM 0.068uF 5% 50V	
		(F170:GERMANY)		C607	1-136-163-00	FILM 0.068uF 5% 50V	
C104	1-162-286-31	CERAMIC 220PF 10% 50V		C608	1-136-157-00	FILM 0.022uF 5% 50V	
		(F170:GERMANY)				(F170:GERMANY)	
C105	1-162-286-31	CERAMIC 220PF 10% 50V		C609	1-136-157-00	FILM 0.022uF 5% 50V	
		(F170:GERMANY)				(F170:GERMANY)	
C106	1-164-075-11	CERAMIC 150PF 10% 50V		C610	1-136-157-00	FILM 0.022uF 5% 50V	
C107	1-164-070-11	CERAMIC 100PF 5% 50V				(F170:GERMANY)	
		(F170:GERMANY)		C611	1-136-157-00	FILM 0.022uF 5% 50V	
C108	1-126-163-11	ELECT 4.7uF 20% 50V				(F170:GERMANY)	
C109	1-164-075-11	CERAMIC 150PF 10% 50V		C612	1-136-157-00	FILM 0.022uF 5% 50V	
C110	1-126-051-11	ELECT 47uF 20% 50V				(F170:GERMANY)	
C111	1-130-480-00	MYLAR 0.0056uF 5% 50V		C613	1-162-217-11	CERAMIC 56PF	
C112	1-130-473-00	MYLAR 0.0015uF 5% 50V				(F170:GERMANY)	
C113	1-126-163-11	ELECT 4.7uF 20% 50V		C702	1-124-982-81	ELECT 220uF 20% 6.3V	
C120	1-126-022-11	ELECT 47uF 20% 16V		C703	1-126-059-11	ELECT 10uF 20% 50V	
C201	1-162-286-31	CERAMIC 220PF 10% 50V		C704	1-124-994-11	ELECT 100uF 20% 10V	
		(F170:GERMANY)		C705	1-126-022-11	ELECT 47uF 20% 16V	
C202	1-162-286-31	CERAMIC 220PF 10% 50V		C706	1-126-059-11	ELECT 10uF 20% 50V	
		(F170:GERMANY)				(F170:GERMANY)	
C203	1-162-286-31	CERAMIC 220PF 10% 50V		C801	1-125-686-11	ELECT 6800uF 20% 50V (F170)	
		(F170:GERMANY)		C801	1-128-342-11	ELECT 10000uF 20% 63V (F240)	
C204	1-162-286-31	CERAMIC 220PF 10% 50V				(F170:GERMANY)	
		(F170:GERMANY)		C802	1-125-686-11	ELECT 6800uF 20% 50V (F170)	
C205	1-162-286-31	CERAMIC 220PF 10% 50V		C802	1-128-342-11	ELECT 10000uF 20% 63V (F240)	
		(F170:GERMANY)				(F170:GERMANY)	
C206	1-164-075-11	CERAMIC 150PF 10% 50V		C803	1-124-921-11	ELECT 470uF 20% 63V (F240)	
C207	1-164-070-11	CERAMIC 100PF 5% 50V		C803	1-126-055-11	ELECT 470uF 20% 50V (F170)	
		(F170:GERMANY)				(F170:GERMANY)	
C208	1-126-163-11	ELECT 4.7uF 20% 50V		C804	1-124-921-11	ELECT 470uF 20% 63V (F240)	
C209	1-164-075-11	CERAMIC 150PF 10% 50V		C804	1-126-055-11	ELECT 470uF 20% 50V (F170)	
C210	1-126-051-11	ELECT 47uF 20% 50V				(F170:GERMANY)	
C211	1-130-480-00	MYLAR 0.0056uF 5% 50V		C805	1-124-916-11	ELECT 22uF 20% 63V (F240)	
C212	1-130-473-00	MYLAR 0.0015uF 5% 50V		C805	1-126-049-11	ELECT 22uF 20% 50V (F170)	
C213	1-126-163-11	ELECT 4.7uF 20% 50V				(F170:GERMANY)	
C220	1-126-022-11	ELECT 47uF 20% 16V		C806	1-124-916-11	ELECT 22uF 20% 63V (F240)	
C501	1-126-163-11	ELECT 4.7uF 20% 50V		C806	1-126-049-11	ELECT 22uF 20% 50V (F170)	
C502	1-126-023-11	ELECT 100uF 20% 25V				(F170:GERMANY)	

Remark	Ref. No.	Part No.	Description	Remark
	61	* 4-944-986-11	PANEL, BACK (F170:AEP)	
	61	* 4-944-986-21	PANEL, BACK (F170:GERMANY)	
	61	* 4-944-986-31	PANEL, BACK (F170:UK)	
	62	* 1-639-814-11	INPUT BOARD	
	63	* 1-639-813-11	SP TM BOARD	
	64	Δ 1-569-007-11	ADAPTOR, CONVERSION 2P (F170:E)	
	65	3-701-947-15	LABEL (2.5A), FUSE (F240)	
	CP1	Δ 1-575-651-11	CORD, POWER (AEP, GERMANY)	
	CP1	Δ 1-575-652-11	CORD, POWER (UK)	
	CP1	Δ 1-575-653-11	CORD, POWER (E)	
	F1	Δ 1-532-286-00	FUSE (F240)	
	F1	Δ 1-532-259-00	FUSE (F170)	
	F2	Δ 1-532-259-00	FUSE (F170:E)	
	S2	Δ 1-570-307-11	SWITCH, VOLTAGE CHANGE (F170:E)	
	T1	Δ 1-450-575-11	TRANSFORMER, POWER (F240)	
	T1	Δ 1-450-576-11	TRANSFORMER, POWER (F170:AEP)	
	T1	Δ 1-450-577-11	TRANSFORMER, POWER (F170:GERMANY)	
	T1	Δ 1-450-578-11	TRANSFORMER, POWER (F170:UK)	
	T1	Δ 1-450-579-11	TRANSFORMER, POWER (F170:E)	

MAIN

SP SW

H. P

SP TM

INPUT

Ref.No.	Part No.	Description	Remark
C807	1-126-051-11	ELECT	47uF 20% 50V (F170)
C807	1-126-062-11	ELECT	47uF 20% 63V (F240)
C808	1-126-051-11	ELECT	47uF 20% 50V (F170)
C808	1-126-062-11	ELECT	47uF 20% 63V (F240)
C809	1-106-375-12	MYLAR	0.022uF 5% 200V
C810	1-126-104-11	ELECT	470uF 20% 35V
C811	1-126-104-11	ELECT	470uF 20% 35V
C812	1-126-023-11	ELECT	100uF 20% 25V
C813	1-126-023-11	ELECT	100uF 20% 25V
C814	1-106-375-12	MYLAR	0.022uF 5% 200V

< CONNECTOR >

CN501	* 1-568-832-11	SOCKET, CONNECTOR 13P
CNJ101	* 1-566-883-61	JACK, PIN 6P
CNJ102	* 1-566-883-51	JACK, PIN 6P
CNJ103	? 1-573-299-11	CONNECTOR, BOARD TO BOARD 10P
CNP301	? 1-573-296-11	CONNECTOR, BOARD TO BOARD 10P
CNP502	* 1-564-243-00	PIN, CONNECTOR 6P
CNP503	* 1-506-599-11	PIN, CONNECTOR 10P
CNP505	* 1-564-241-00	PIN, CONNECTOR 4P
CNP801	* 1-564-104-00	PIN, CONNECTOR 3P

< DIODE >

D501	8-719-912-20	DIODE 1SS120
D502	8-719-912-20	DIODE 1SS120
D601	8-719-912-20	DIODE 1SS120
D602	8-719-912-20	DIODE 1SS120
D701	8-719-912-20	DIODE 1SS120
D702	8-719-912-20	DIODE 1SS120
D703	8-719-200-77	DIODE 10E2N
D801	8-719-302-38	DIODE RBV-602-01
D802	8-719-200-77	DIODE 10E2N
D803	8-719-200-77	DIODE 10E2N
D804	8-719-200-77	DIODE 10E2N
D805	8-719-200-77	DIODE 10E2N

< IC >

IC101	8-759-636-74	IC M5218AP-22
IC501	8-759-109-06	IC uPC1298V (F170)
IC501	8-759-144-04	IC uPC1342V (F240)
IC601	8-759-109-06	IC uPC1298V (F170)
IC601	8-759-144-04	IC uPC1342V (F240)
IC701	8-759-111-68	IC uPC1237HA
IC801	8-759-231-59	IC TA7815S
IC802	8-759-245-87	IC TA7915S

< JACK >

J501	1-507-796-71	JACK (HEADPHONES)
------	--------------	-------------------

Ref.No.	Part No.	Description	Remark
---------	----------	-------------	--------

< COIL >

L501	* 1-420-872-00	COIL, AIR CORE
L601	* 1-420-872-00	COIL, AIR CORE

< TRANSISTOR >

Q501	8-729-209-15	TRANSISTOR 2SD2012
Q502	8-729-320-83	TRANSISTOR 2SC3855-0Y (F170:GERMANY/F240)
Q502	8-729-321-96	TRANSISTOR 2SC3854-0Y (F170:AEP, UK, E)
Q503	8-729-320-86	TRANSISTOR 2SA1491-0Y (F170:GERMANY/F240)
Q503	8-729-322-02	TRANSISTOR 2SA1490-OPY (F170:AEP, UK, E)
Q504	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA
Q601	8-729-209-15	TRANSISTOR 2SD2012
Q602	8-729-320-83	TRANSISTOR 2SC3855-0Y (F170:GERMANY/F240)
Q602	8-729-321-96	TRANSISTOR 2SC3854-0Y (F170:AEP, UK, E)
Q603	8-729-320-86	TRANSISTOR 2SA1491-0Y (F170:GERMANY/F240)
Q603	8-729-322-02	TRANSISTOR 2SA1490-OPY (F170:AEP, UK, E)
Q604	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA
Q701	8-729-900-63	TRANSISTOR DTA124ES
Q801	8-729-111-55	TRANSISTOR 2SD1312-K
Q802	8-729-924-90	TRANSISTOR 2SB1370-EF
Q901	8-729-620-05	TRANSISTOR 2SC2603-EF

< RESISTOR >

R101	1-249-417-11	CARBON	1K	5%	1/4W
R102	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R103	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R104	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R105	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R106	1-249-417-11	CARBON	1K	5%	1/4W
R107	1-247-903-00	CARBON	1M	5%	1/4W
R108	1-247-903-00	CARBON	1M	5%	1/4W
R109	1-247-903-00	CARBON	1M	5%	1/4W
R110	1-247-903-00	CARBON	1M	5%	1/4W
R111	1-249-441-11	CARBON	100K	5%	1/4W
R112	1-249-418-11	CARBON	1.2K	5%	1/4W (F170:GERMANY)
R113	1-249-441-11	CARBON	100K	5%	1/4W
R114	1-249-416-11	CARBON	820	5%	1/4W
R115	1-247-897-11	CARBON	560K	5%	1/4W
R116	1-249-437-11	CARBON	47K	5%	1/4W
R117	1-249-409-11	CARBON	220	5%	1/4W
R118	1-249-441-11	CARBON	100K	5%	1/4W
R201	1-249-417-11	CARBON	1K	5%	1/4W
R202	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R203	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R204	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R205	1-249-413-11	CARBON	470	5%	1/4W (F170:GERMANY)
R206	1-249-417-11	CARBON	1K	5%	1/4W

MAIN

SP SW

H. P

SP TM

INPUT

PANEL

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
R207	1-247-903-00	CARBON 1M 5% 1/4W	
R208	1-247-903-00	CARBON 1M 5% 1/4W	
R209	1-247-903-00	CARBON 1M 5% 1/4W	
R210	1-247-903-00	CARBON 1M 5% 1/4W	
R211	1-249-441-11	CARBON 100K 5% 1/4W	
R212	1-249-418-11	CARBON 1.2K 5% 1/4W (F170:GERMANY)	
R213	1-249-441-11	CARBON 100K 5% 1/4W	
R214	1-249-416-11	CARBON 820 5% 1/4W	
R215	1-247-897-11	CARBON 560K 5% 1/4W	
R216	1-249-437-11	CARBON 47K 5% 1/4W	
R217	1-249-409-11	CARBON 220 5% 1/4W	
R218	1-249-441-11	CARBON 100K 5% 1/4W	
R501	1-249-417-11	CARBON 1K 5% 1/4W	
R502	1-249-438-11	CARBON 56K 5% 1/4W	
R503	1-249-412-11	CARBON 390 5% 1/4W	
R504	1-249-466-11	CARBON 56K 5% 1/4W	
R505	1-249-423-11	CARBON 3.3K 5% 1/4W	
R506	1-249-419-11	CARBON 1.5K 5% 1/4W	
R508	1-247-688-11	CARBON 10 5% 1/4W	
R509	1-247-688-11	CARBON 10 5% 1/4W	
R510	Δ 1-216-361-00	METAL OXIDE 0.22 5% 2W F (F170)	
R510	Δ 1-217-611-00	METAL OXIDE 0.1 10% 2W F (F240)	
R511	Δ 1-216-361-00	METAL OXIDE 0.22 5% 2W F (F170)	
R511	Δ 1-217-611-00	METAL OXIDE 0.1 10% 2W F (F240)	
R512	1-247-713-11	CARBON 1K 5% 1/4W	
R513	1-249-427-11	CARBON 6.8K 5% 1/4W	
R514	1-247-727-11	CARBON 10 5% 1/2W	
R515	1-247-727-11	CARBON 10 5% 1/2W	
R516	1-247-887-00	CARBON 220K 5% 1/4W	
R517	1-249-431-11	CARBON 15K 5% 1/4W	
R518	1-247-727-11	CARBON 10 5% 1/2W (F170:GERMANY)	
R519	1-247-727-11	CARBON 10 5% 1/2W (F170:GERMANY)	
R520	1-247-745-11	CARBON 330 5% 1/2W	
R521	1-247-745-11	CARBON 330 5% 1/2W	
R601	1-249-417-11	CARBON 1K 5% 1/4W	
R602	1-249-438-11	CARBON 56K 5% 1/4W	
R603	1-249-412-11	CARBON 390 5% 1/4W	
R604	1-249-466-11	CARBON 56K 5% 1/4W	
R605	1-249-423-11	CARBON 3.3K 5% 1/4W	
R606	1-249-419-11	CARBON 1.5K 5% 1/4W	
R608	1-247-688-11	CARBON 10 5% 1/4W	
R609	1-247-688-11	CARBON 10 5% 1/4W	
R610	Δ 1-216-361-00	METAL OXIDE 0.22 5% 2W F (F170)	
R610	Δ 1-217-611-00	METAL OXIDE 0.1 10% 2W F (F240)	
R611	Δ 1-216-361-00	METAL OXIDE 0.22 5% 2W F (F170)	
R611	Δ 1-217-611-00	METAL OXIDE 0.1 10% 2W F (F240)	
R612	1-247-713-11	CARBON 1K 5% 1/4W	
R613	1-249-427-11	CARBON 6.8K 5% 1/4W	
R614	1-247-727-11	CARBON 10 5% 1/2W	
R615	1-247-727-11	CARBON 10 5% 1/2W	
R616	1-247-887-00	CARBON 220K 5% 1/4W	
R617	1-249-431-11	CARBON 15K 5% 1/4W	
R618	1-247-727-11	CARBON 10 5% 1/2W (F170:GERMANY)	
R619	1-247-727-11	CARBON 10 5% 1/2W (F170:GERMANY)	

Ref. No.	Part No.	Description	Remark
R620	1-247-745-11	CARBON 330 5% 1/2W	
R621	1-247-745-11	CARBON 330 5% 1/2W	
R701	1-249-427-11	CARBON 6.8K 5% 1/4W	
R702	1-249-441-11	CARBON 100K 5% 1/4W	
R703	1-249-439-11	CARBON 68K 5% 1/4W	
R704	1-249-430-11	CARBON 12K 5% 1/4W (F170)	
R704	1-249-431-11	CARBON 15K 5% 1/4W (F240)	
R705	Δ 1-215-868-00	METAL OXIDE 680 5% 1W F (F240)	
R705	Δ 1-216-430-11	METAL OXIDE 390 5% 1W F (F170)	
R706	1-249-427-11	CARBON 6.8K 5% 1/4W (F170:GERMANY)	
R706	1-249-428-11	CARBON 8.2K 5% 1/4W (F170:AEP, UK, E)	
R706	1-249-429-11	CARBON 10K 5% 1/4W (F240)	
R801	Δ 1-215-912-11	METAL OXIDE 150 5% 3W F (F170:AEP, UK, E)	
R801	Δ 1-216-475-11	METAL OXIDE 120 5% 3W F (F170:GERMANY)	
R801	Δ 1-216-478-11	METAL OXIDE 390 5% 3W F (F240)	
R802	Δ 1-215-915-11	METAL OXIDE 470 5% 3W F (F170:GERMANY)	
R802	Δ 1-215-918-00	METAL OXIDE 1.5K 5% 3W F (F240)	
R802	Δ 1-216-479-11	METAL OXIDE 560 5% 3W F (F170:AEP, UK, E)	
R805	1-249-417-11	CARBON 1K 5% 1/4W	
R806	1-249-417-11	CARBON 1K 5% 1/4W	
R901	1-249-417-11	CARBON 1K 5% 1/4W	
< VARIABLE RESISTOR >			
RV501	1-238-596-11	RES. ADJ. CARBON 470	
RV601	1-238-596-11	RES. ADJ. CARBON 470	
< RELAY >			
RY701	1-515-501-00	RELAY	
< SWITCH >			
S303	1-572-804-11	SWITCH, SLIDE (INPUT SELECTOR)	
S501	1-571-973-11	SWITCH, ROTARY (SPEAKERS)	
< TERMINAL >			
TM501	1-537-227-11	TERMINAL BOARD (SP) (F170:AEP)	
TM501	1-537-228-11	TERMINAL BOARD (SP) (F170:GERMANY)	
TM501	1-537-235-11	TERMINAL BOARD (SP) (F170:UK, E/F240)	
TM801	1-808-881-91	THERMISTOR (POSITIVE) 2.2	
TM802	1-808-881-91	THERMISTOR (POSITIVE) 2.2	

* A-4345-123-A PANEL BOARD, COMPLETE (F240)

* A-4345-133-A PANEL BOARD, COMPLETE (F170)

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

PANEL**POWER****LED****TRANSFORMER**

Ref. No.	Part No.	Description			
	* 1-639-816-11	POWER BOARD			

	* 1-639-817-11	LED BOARD			

	* 1-639-818-11	TRANSFORMER BOARD			

	1-533-225-11	HOLDER, FUSE			
	* 1-564-214-11	PIN, CONNECTOR 3P			
	* 3-362-478-21	HOLDER (T), LED			
		< CAPACITOR >			
C1	△ 1-161-744-00	CERAMIC	0.01uF		400V
C301	1-126-163-11	ELECT	4.7uF	20%	50V
C302	1-162-217-31	CERAMIC	56PF	5%	50V
C303	1-126-163-11	ELECT	4.7uF	20%	50V
C304	1-136-155-00	FILM	0.015uF	5%	50V
C305	1-136-161-00	FILM	0.047uF	5%	50V
C306	1-136-169-00	FILM	0.22uF	5%	50V
C307	1-136-175-00	FILM	0.68uF	5%	50V
C309	1-162-286-31	CERAMIC	220PF	10%	50V
C310	1-136-161-00	FILM	0.047uF	5%	50V
C311	1-126-022-11	ELECT	47uF	20%	16V
C401	1-126-163-11	ELECT	4.7uF	20%	50V
C402	1-162-217-31	CERAMIC	56PF	5%	50V
C403	1-126-163-11	ELECT	4.7uF	20%	50V
C404	1-136-155-00	FILM	0.015uF	5%	50V
C405	1-136-161-00	FILM	0.047uF	5%	50V
C406	1-136-169-00	FILM	0.22uF	5%	50V
C407	1-136-175-00	FILM	0.68uF	5%	50V
C409	1-162-286-31	CERAMIC	220PF	10%	50V
C410	1-136-161-00	FILM	0.047uF	5%	50V
C411	1-126-022-11	ELECT	47uF	20%	16V
		< CONNECTOR >			
CN301	* 1-568-832-11	SOCKET, CONNECTOR 13P			
CNP2	* 1-564-321-00	PIN, CONNECTOR 2P			
CNP3	* 1-564-321-00	PIN, CONNECTOR 2P			
CNP4	* 1-564-321-00	PIN, CONNECTOR 2P (F170:E)			
CNP5	* 1-564-687-11	PIN, CONNECTOR 3P (F170:E)			
		< CORD, POWER >			
CP1	△ 1-575-651-11	CORD, POWER (AEP, GERMANY)			
CP1	△ 1-575-652-11	CORD, POWER (UK)			
CP1	△ 1-575-653-11	CORD, POWER (E)			
		< DIODE >			
D901	8-719-303-00	DIODE SEL2510C-C			
D902	8-719-303-00	DIODE SEL2510C-C			
D904	8-719-301-52	DIODE SEL2810A-C			
D905	8-719-301-52	DIODE SEL2810A-C			
		< FUSE >			
F1	△ 1-532-286-00	FUSE TIME-LAG 2.5A (F240)			
F1	△ 1-532-259-00	FUSE TIME-LAG 1.6A (F170)			
F2	△ 1-532-259-00	FUSE TIME-LAG 1.6A (F170:E)			

Ref. No.	Part No.	Description	Remark
	< IC >		
IC301	8-759-634-50	IC M5218AL	
	< RESISTOR >		
R119	1-249-405-11	CARBON 100 5% 1/4W	
R219	1-249-405-11	CARBON 100 5% 1/4W	
R301	1-249-417-11	CARBON 1K 5% 1/4W	
R302	1-249-417-11	CARBON 1K 5% 1/4W	
R303	1-249-423-11	CARBON 3.3K 5% 1/4W	
R304	1-249-442-11	CARBON 510 5% 1/4W	
R305	1-249-442-11	CARBON 510 5% 1/4W	
R306	1-249-408-11	CARBON 180 5% 1/4W	
R307	1-247-903-00	CARBON 1M 5% 1/4W	
R308	1-247-903-00	CARBON 1M 5% 1/4W	
R309	1-249-422-11	CARBON 2.7K 5% 1/4W	
R310	1-247-830-11	CARBON 910 5% 1/4W	
R311	1-249-441-11	CARBON 100K 5% 1/4W	
R312	1-249-429-11	CARBON 10K 5% 1/4W	
R313	1-249-429-11	CARBON 10K 5% 1/4W	
R314	1-247-903-00	CARBON 1M 5% 1/4W	
R401	1-249-417-11	CARBON 1K 5% 1/4W	
R402	1-249-417-11	CARBON 1K 5% 1/4W	
R403	1-249-423-11	CARBON 3.3K 5% 1/4W	
R404	1-249-442-11	CARBON 510 5% 1/4W	
R405	1-249-442-11	CARBON 510 5% 1/4W	
R406	1-249-408-11	CARBON 180 5% 1/4W	
R407	1-247-903-00	CARBON 1M 5% 1/4W	
R408	1-247-903-00	CARBON 1M 5% 1/4W	
R409	1-249-422-11	CARBON 2.7K 5% 1/4W	
R410	1-247-830-11	CARBON 910 5% 1/4W	
R411	1-249-441-11	CARBON 100K 5% 1/4W	
R412	1-249-429-11	CARBON 10K 5% 1/4W	
R413	1-249-429-11	CARBON 10K 5% 1/4W	
R414	1-247-903-00	CARBON 1M 5% 1/4W	
R902	1-247-747-11	CARBON 470 5% 1/2W	
R903	1-247-749-11	CARBON 560 5% 1/2W	
	< VARIABLE RESISTOR >		
RV301	1-238-513-11	RES. VAR. CARBON 150K/150K (BALANCE)	
RV302	1-241-548-11	RES. VAR. CARBON 10K (TREBLE)	
RV303	1-241-549-11	RES. VAR. CARBON 10K (BASS)	
RV304	1-241-550-11	RES. VAR. CARBON 120K/120K (VOLUME)	
	< SWITCH >		
S1	1-553-318-11	SWITCH, PUSH (1 KEY) (POWER)	
S2	Δ 1-570-307-11	SWITCH (VOLTAGE SELECTOT) (F170:E)	
S301	1-571-112-21	SWITCH, PUSH (1 KEY) (LOUDNESS)	
S302	1-572-642-11	SWITCH, PUSH (1 KEY) (SOURCE DIRECT)	
S304	1-571-872-11	SWITCH, PUSH (1 KEY) (TAPE/DAT MONITOR)	
	< TRANSFORMER >		
T1	Δ 1-450-575-11	TRANSFORMER, POWER (F240)	
T1	Δ 1-450-576-11	TRANSFORMER, POWER (F170:AEP)	
T1	Δ 1-450-577-11	TRANSFORMER, POWER (F170:GERMANY)	

PANEL

POWER

LED

TRANSFORMER

Ref. No.	Part No.	Description	Remark
T1	△ · 1-450-578-11	TRANSFORMER, POWER (F170:UK)	
T1	△ · 1-450-579-11	TRANSFORMER, POWER (F170:E)	

MISCELLANEOUS

7	1-553-318-41	SWITCH, PUSH (AC POWER) (1 KEY)
11	1-590-036-11	WIRE, FLAT TYPE (13 CORE)
21	1-572-803-11	SWITCH, ROTARY SLIDE (INPUT SELECTOR)
64	△ · 1-569-007-11	ADAPTOR, CONVERSION 2P (F170:E)

ACCESSORY & PACKING MATERIAL

- * 3-704-343-01 SHEET (STANDARD), PROTECTION (F240)
- * 3-753-389-11 MANUAL, INSTRUCTION (ENGLISH, FRENCH,
SPANISH, PORTUGUESE) (AEP, UK, E, GERMANY)
- * 3-753-389-41 MANUAL, INSTRUCTION
(GERMAN, DUTCH, SWEDISH, ITALIAN) (AEP)
- * 4-944-050-01 INDIVIDUAL CARTON
- * 4-945-810-01 CUSHION (LEFT) (F240)
- * 4-945-811-01 CUSHION (RIGHT) (F240)

HARDWARE LIST

# 1	7-621-849-00	SCREW (BV/RING)
# 2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S
# 3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
# 4	7-682-548-04	SCREW +BVTT 3X8 (S)
# 5	7-682-549-04	SCREW +BVTT 3X10 (S)
# 6	7-682-560-04	SCREW +BVTT 4X6 (S)

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.